

GETEST UPDATE GUIDE FOR THE ANDROID OS

1.-DESCRIPTION

This document describes the steps that must be followed to update the GETEST software running on Android

A copy of this guide can be found on CIRCUTOR's web site: www.circutor.es

Disconnect the device from the power supply source before undertaking any form of maintenance, modification of connections, repairs, etc. If you suspect that there is an operational fault in the unit or in its protection system, remove the unit from service.

2.-INSTALLATION

Connect your mobile phone with an Android OS to the computer with a USB cable.



Touch the top of your mobile phone's main screen and slide your finger down until it reaches the bottom of the screen. The following screen will be displayed on your mobile phone if this procedure was performed correctly




Select the following option:




Next, select "Connect USB Storage":




When you select the connect option, Android's icon will turn orange. This shows that the mobile phone-computer connection was established correctly. Next, select "MY PC" on your computer and touch the "Removable Drive" icon. Copy the "Getest Software" file to any folder on your mobile phone with an Android OS.

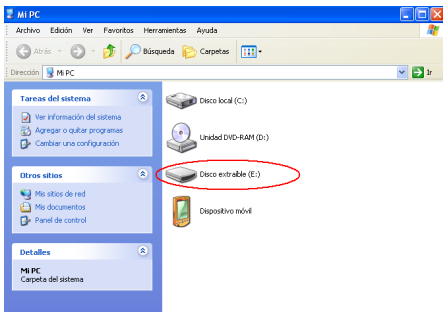

Search for the Circutor application that was copied onto your Android system. To do so, touch the following icon:

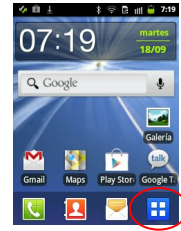


Open the "My files" folder.

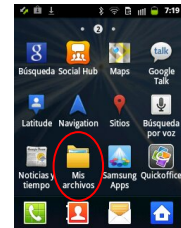


Search for the Getest CIRCUTOR application and open it:



Select OK

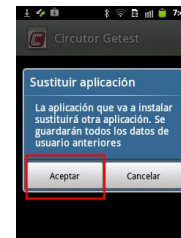

Select "Install" and wait a few seconds until the installation process is complete.

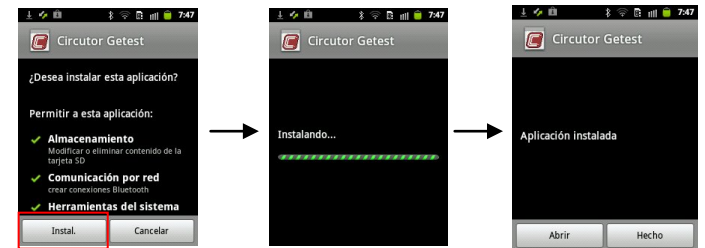

3.-MAINTENANCE AND TECHNICAL SERVICE

Please send your questions related to the operation of the unit or any problems encountered to CIRCUTOR, SA's service staff
 CIRCUTOR S.A. – AFTER-SALES SERVICE
 Tel: 902449459 (Spain) / +34 937452900 (Outside Spain)
 Vial Sant Jordi, s/n – 08232 – Viladecavalls (Barcelona)
 email: sat@circutor.es web:www.circutor.es